


## WATER HOSE KIT FOR MASONRY SAWS


VX141MS, VX141MSPRO and VX141MSPROR

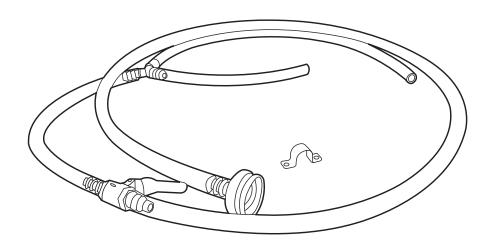


PART # V350MSGHKIT

## FOR VX141MSPRO & VX141MSPROR RENTAL

 Orient the water pipes as shown in Fig. A. Insert the shortest pipe from the "Y" adapter into the adjacent sleeve at the rear of the blade guard. First, you will need to remove the black cap covering the hole insert (#1). The longest pipe, which has a control valve midway, should be pointed towards the floor.

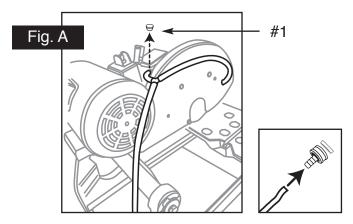

2. Insert the second pipe protruding from the top of the "Y" adapter into the slot located on the side of the blade guard towards the front of the saw. This is the hole in the front of the blade guard (#2), do not remove the black caps on the side. See Fig. B.

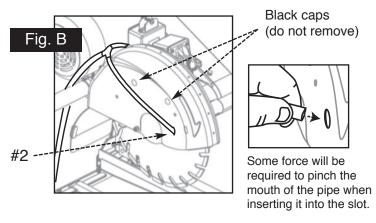





#### WATER HOSE KIT INSTALLATION:

## FOR VX141MS

1. Orient the water pipes as shown in Fig. A. Insert the shortest pipe from the "Y" adapter into the adjacent sleeve at the rear of the blade guard. First, you will need to remove the black cap covering the hole insert (#1). The longest pipe, which has a control valve midway, should be pointed towards the floor. Secure the "Y" adapter to the rear of the blade guard using the provided bracket and screws.

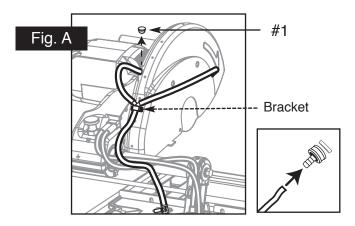

Insert the second pipe protruding from the top of the "Y"
adapter into the slot located on the side of the blade guard
towards the front of the saw. This is the hole in the front of
the blade guard (#2), do not remove the black caps on the
side. See Fig. B.

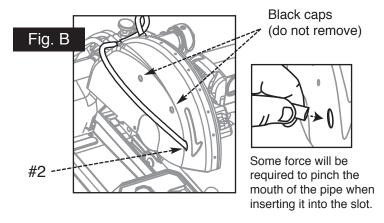



# CORPORATE OFFICE: SO. CALIFORNIA • USA

4900 ZAMBRANO ST., COMMERCE, CA 90040-0031

562-927-5561 • FAX 562-928-3857

Toll Free: 800-969-5561 www.pearlabrasive.com

#### **GEORGIA • USA**

3950 STEVE REYNOLDS BLVD. NORCROSS, GEORGIA 30093

### **ONTARIO • CANADA**

375-2 PIDO ROAD PETERBOROUGH, ONTARIO K9J-6X7