

PEARL® VACU-GUARD™

MODEL #VAC70EP

7" DUST SHROUD - HINGED

INSTRUCTION MANUAL



Silica Dust Warning

Grinding/cutting/drilling of masonry, concrete, metal and other materials can generate dust, mists and fumes containing chemicals known to cause serious fatal injury or illness, such as respiratory disease, cancer, birth defects or other reproductive harm. If you are familiar with the risks associated with the particular material being cut, review the material safety data sheet and/or consult your employer, the material manufacturer/supplier, governmental agencies such as OSHA and NIOSH and other sources of hazardous materials. California and some other authorities, for instance, have published lists of substances known to cause cancer, reproductive toxicity, or other harmful effects. Control dust, mist and fumes at the source where possible. In this regard use good work practices and follow the recommendations of the manufacturer/supplier, OSHA/NIOSH, and occupational and trade associations. When the hazards from inhalation of dust, mists and fumes cannot be eliminated, the operator and any bystanders should always wear a respirator approved by OSHA/MSHA for the material being cut.

REV. 1 032019

PEARL ABRASIVE CO. DUST SHROUD

Box Includes: Shroud, shroud clamp, shroud spacer (5), instruction manual.

Vacuum port size: ID 2.25" / OD 2.65"



WARNING: Cancer and reproductive harm
www.P65Warnings.ca.gov

STEP BY STEP INSTALLATION:



1. Place grinder on the floor, face up.



2. Place shroud on grinder.



3. Select appropriate spacer for your model grinder below:

| MAKE | MODEL |
|-----------|--------------|
| Metabo |W23-180 |
| Milwaukee | ...6088-20 |
| Hitachi |G18MR |
| DeWalt |D28493 |
| Makita |GA7020 |



4. Push and twist until shroud Interior O-ring snaps into spacer exterior groove.



5. Tighten hose clamp so shroud is firmly attached to grinder.




6. Place washer on top of cup nut as needed.



7. Once shroud is tightly attached to the grinder, attach cup wheel as normal. Ensure cup wheel does not contact shroud.



8. Shroud is now ready to be attached to vacuum.

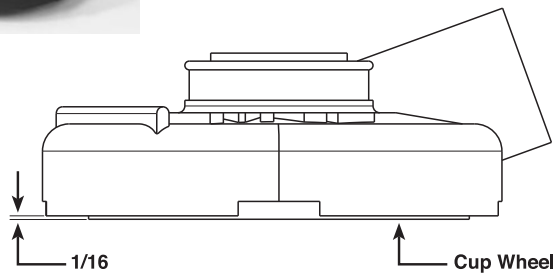

Use washer to achieve distance as needed or as cup wheel is worn.

HINGED NOSE INSTRUCTION:



1. Lift nose of shroud.



2. Place against wall and grind.

VACU-GUARD™

PEARL®

CORPORATE OFFICE: SO. CALIFORNIA • USA
4900 ZAMBRANO ST., COMMERCE, CA 90040-0031
562-927-5561 • FAX 562-928-3857

800-969-5561

PEARLABRASIVE.COM

GEORGIA • USA
3950 STEVE REYNOLDS BLVD.,
NORCROSS GA 30093

ONTARIO • CANADA
375-2 PIDO ROAD
PETERBOROUGH, ONTARIO K9J-6X7